

1. Remove the 4 socket head cap screws from the bottom of the housing and remove lower part of housing.
2. Remove the 2 large guide balls (a magnet maybe helpful here). Be careful not to lose them!
3. Remove piston and slide Swing Limiter over the piston rod.
4. Reassemble in reverse order – DONE!